 


# OFFER YOU A NEW VISION

User Manual

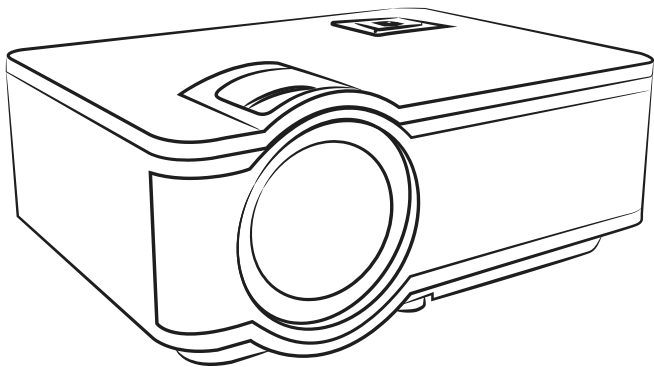

**Model : T6**



## IMPORTANT SAFETY CONSIDERATIONS


### Attentions:

Thank you for purchasing this series of digital projectors.  
Please read through this User's manual for proper use of this product.

### Note:


- 1 Do not look directly into the lens while the projector is running, as strong light may damage your eyes.
- 2 Do not block the air outlet to prevent the projector from cooling down because internal electronics are damaged.
- 3 Keep the projector and accessories out of the reach of children.
- 4 Please make sure that the working environment of the projector is dry and ventilated.
- 5 Do not place the projector in a place that is too hot or cold which will shorten the life of the device. The recommended working environment is 5 °C ~ 35 °C.
- 6 Do not press hard on the projector, as it may damage the product.
- 7 Do not throw, hit, or shake the projector to avoid damaging the circuit board.
- 8 Any questions after receiving the projector, please feel free to contact us through Amazon Support, we will quickly and correctly solve your problem within 24 hours and give you a satisfactory answer.

## PRODUCT OVERVIEW

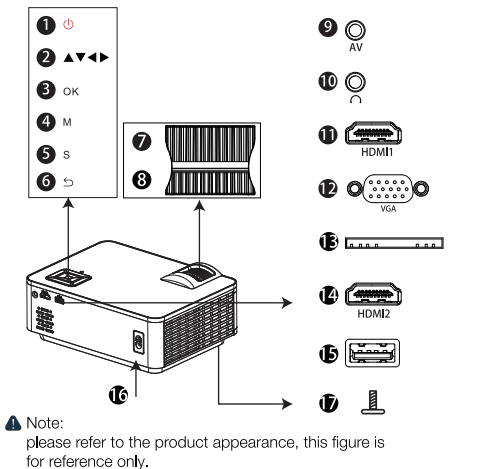


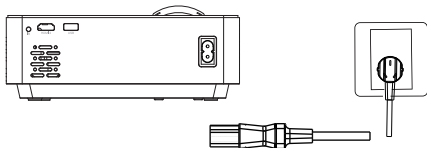
- 1 Power
- 2 Arrow Keys
- 3 OK
- 4 Setting
- 5 Signal Source
- 6 Back
- 7 Lens Focussing
- 8 Keystone Correction
- 9 Audio / Video Input
- 10 Earphone / 3.5mm Audio Out
- 11 HDMI 1
- 12 VGA Input
- 13 Media Card
- 14 HDMI 2
- 15 USB
- 16 Power Input(110-240V)
- 17 Adjustable Knob

## REMOTE CONTROL

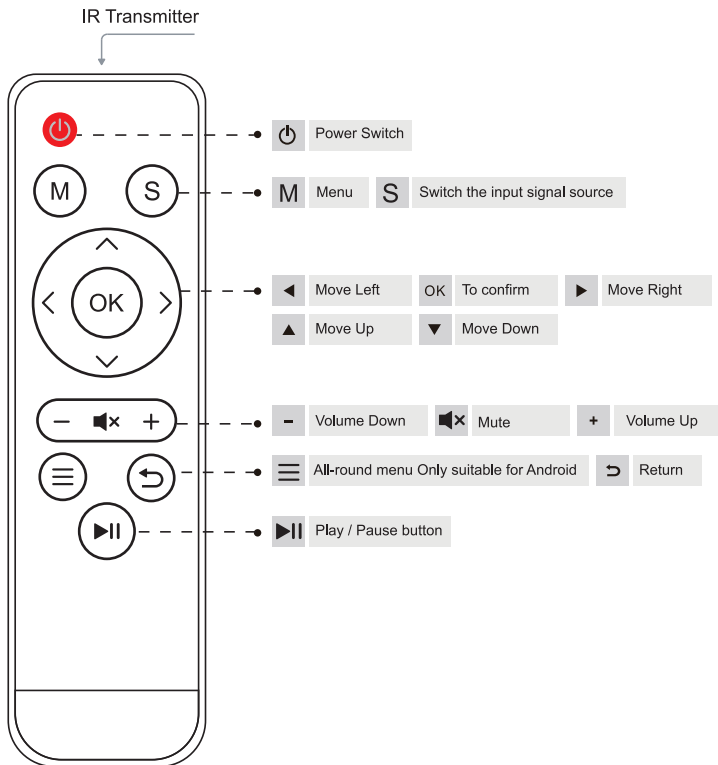


## POWER

- 1: Plug the power cord into a power outlet.
- 2: Press the button “” on the projector or on the remote control.



## Focus


Let the projector be perpendicular to the wall, with the Focusing button to make the picture clear. When focusing, you can broadcast programs to help you finish focus.

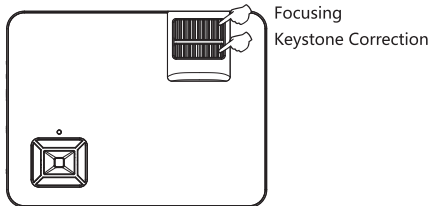

## Keystone Correction

In different angel you put the projector, the projection will Deformation like a trapezoid, use the keystone correction to make it correctly.
 
## CONNECTING

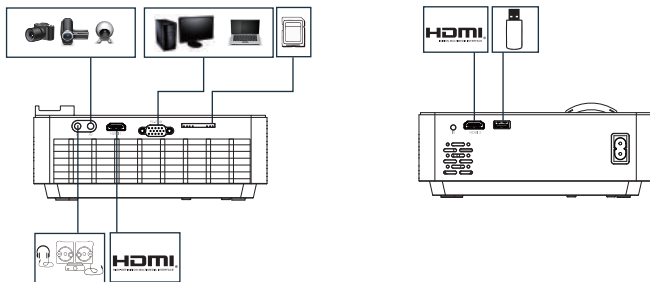

### 1. Select Signal Source

Press the signal source key "S" of the projector or the remote control, enter the signal source menu. Use the Direction key (▲▼◀▶) and the Confirmation key(OK) to select the signal source.

### 2. Connect HDMI or VGA devices


- ① VGA and HDMI interface can be connected with the computer or other devices with the VGA / HDMI output interface.
- ② Choose the media signal channel: "PC-RGB" or "HDMI".

## CONNECTING

Add: Different brand laptop output keys are as follows:

|          |       |
|----------|-------|
| Lenovo   | Fn+F3 |
| Dell     | Fn+F8 |
| HP       | Fn+F4 |
| ThinkPad | Fn+F7 |
| Asus     | Fn+F8 |
| Acer     | Fn+F5 |
| Samsung  | Fn+F4 |
| Sony     | Fn+F7 |

|           |        |
|-----------|--------|
| Fujitsu   | Fn+F10 |
| Haier     | Fn+F3  |
| NEC       | Fn+F3  |
| Panasonic | Fn+F3  |
| Sharp     | Fn+F5  |
| Hitachi   | Fn+F7  |
| TOSHIBA   | Fn+F5  |

The user of windows 7 or over windows 7. Simply press the  +P, select "copy" to connect. If the operation above is invalid, Please update the computer graphics driver.

 
### 3. Connect the smartphones

① Connect an iPhone/iPad

Need a lighting to HDMI adapter cable(Not included in package), click "Trust it" when connecting.

② Connect an Android device

A Micro USB/Type C to HDMI Cable is needed for Android phone connection.(Not included in package)

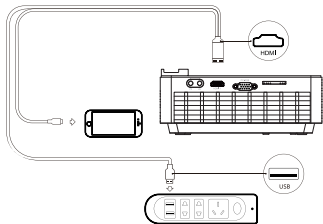

Lighting to HDMI adapter



Micro USB/ Type C to  
HDMI Cable

## CONNECTING

### **NOTE:**

1. Please kindly note that the adapter was not included in the package.
2. Please also make sure to choose HDMI as the input source after connection.
3. Because there are different versions of Lighting to HDMI adapter cable may not be compatible with your smartphone and there is a problem that it cannot be connected. Has nothing to do with the projector, you should try another adapter cable.

 
## 4. Connect the USB drive or SD card

- ① Different from other devices, when you connect a USB drive or SD card, you don't need to click "S" to select the USB signal source, directly select the file you want to play on the main menu.
- ② To play a video stored in a USB drive or SD card, select "Movie" on the main menu, and press the "OK".
- ③ To play a picture / music / text stored in a USB drive or SD card, select "Photo" / "Music" / "Text" on the main menu, and press the "OK".

## CONNECTING

### ⚠ Note:

- ① The projector supports up to 64GB SD card and 3TB hard drive.
- ② The chip of this projector is not compatible with files stored in a USB stick or SD card in PPT format. If you want to play PPT, please store the PPT document on your mobile phone, laptop or DVD player.

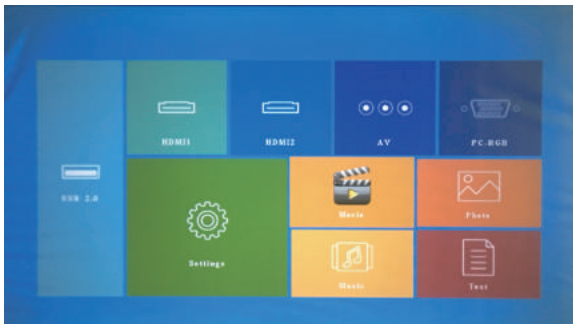

### 5. Connect AV video devices

- ① Use the 3 in 1 video cable (Included in the package) to connect with AV.
- ② Choose the media signal channel: "AV".

### 6. Connect 3.5mm audio devices

Support 3.5mm earphones and other cable sound devices.

## SPECIFICATION

|                        |   |
|------------------------|---|
| Photo Format Supported | BMP/JPG/PNG/GIF                             |
| Video Format Supported | MP4/AVI/MKV/FLV/WMV/MOV/RMVB/RM/MPEG1/MPEG1 |
| Audio Format Supported | MP3/WMA/PCM/AAC/FLAC                        |

## CONNECTING

### MORE TIPS ABOUT NETFLIX, PRIME VIDEO, HULU, ETC

It works with youtube, chrome, safari, facetime when you connect it to a smartphone directly.

And it doesn't support play protected video when you connect it to your smartphone directly. (Netflix, Prime Video, Hulu, etc) Due to these videos have an encryption protocol, the projector has no right to recognize when it is connected directly to the phone via the USB interface.

But it works with Netflix, Amazon prime video or any other copyright videos when connecting this projector to a laptop, fire tv stick, Roku or Chrome cast. The reason why the fire stick or other HDMI devices can play Netflix is that the HDMI interface encryption protocol includes Netflix's.

**Last but not least this projector does not support Dolby sound.**

So there will be no sound when you play Dolby sound videos, (Amazon fire stick, Netflix, Blue ray movies and so on). In this case, please kindly turn off the Dolby sound on your device or apps.

The instruction for your reference to turn off the Dolby sound (Settings > Display & Sounds > Audio > Dolby Digital Output > and then turn Dolby Digital (OFF)


## PROJECTION SETTINGS

1. Click "Menu" of the projector remote control or "M" of the projector, enter the setting menu.
2. "PICTURE"/" SOUND"/" TIME"/" OPTION" can be set manually. After you select the properties (PICTURE/SOUND/TIME/OPTION) you want to set, please press "<" or ">" on the operation panel to select the setting range of the properties.



### OPTIONS RELATED TO "PICTURE" ARE SET ON THIS SCREEN

#### PICTURE

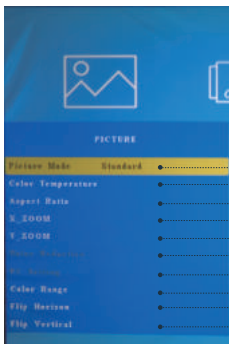


- Picture Mode: "Standard", "Soft", "User", "Dynamic" picture modes default to fit a variety of projection
- Color Temperature: "Medium""Warm""User""Cool" temperature modes default for different color preferences
- Aspect Ratio: Set the length to width ratio of the picture
- X\_ZOOM: Horizontal zoom
- Y\_ZOOM: Vertical zoom
- Noise Reduction: Set the noise reduction strength of the screen (Middle, High, Default, Off, Low)
- PC Setting: Set the input screen when connecting the VGA devices. (Auto Adjust, Horizontal Pos, Vertical Pos, Size, Phase)
- Color Range: Set the color range of the picture
- Flip Horizon: Flip the screen horizontally
- Flip Vertical: Flip the screen vertically

## PROJECTION SETTINGS
 
### OPTIONS RELATED TO "SOUND" ARE SET ON THIS SCREEN


#### SOUND

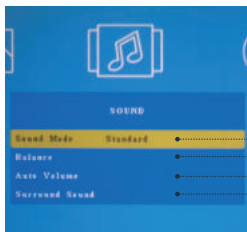

- Sound Mode: "Standard", "Movie", "Sports", "User" modes are default
- Balance: Set the gain difference between left and right sound channels
- Auto Volume: Off/On
- Surround Sound: Off/ SRS TruSurround XT/Surround

### OPTIONS RELATED TO "TIME" ARE SET ON THIS SCREEN
 
#### TIME

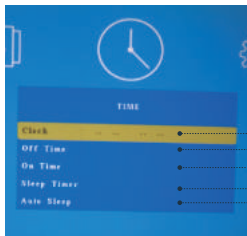


- Clock: Set the system time which is the reference for using other time-related functions
- Off Time: Set the automatic off time
- On Time: Set the automatic on time
- Sleep Timer: The system will automatically sleep to save energy
- Auto Sleep: The system will automatically sleep to save energy when no change occurs on the screen for a period

## PROJECTION SETTINGS

 OPTIONS RELATED TO "SETTINGS" ARE SET ON THIS SCREEN

### OPTION

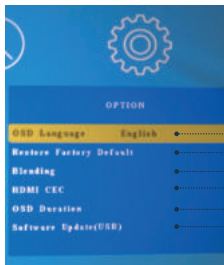

- OSD Language: Set the language in the system with English as default
- Restore Factory Default: Restore the factory default settings
- Blending: Set the menu transparency
- HDMI CEC
- OSD Duration: Set the menu display time
- Software Update(USB): Update the software system version (USB storage device with correct software upgrading package needs be inserted)

## PROJECTION SETTINGS

1. Dust prevention: Excessive dust will affect the heat dissipation of the projector. It is suggested to clean its dust filter every one or a half months according to the actual environment.
2. Ventilation: As the projector integrates the sound & photo-electricity, the optical source will produce heat during its operation. Therefore, it shall be ensured that no objects around will block the air inlet and outlet of the projector to improve its working stability and service life.
3. Lens maintenance: Lens, as the core component of the projector, is directly related to the picture definition. The dirty lens shall be wiped with a soft cotton cloth for the glass lens surface. Hard cloth or abrasives shall not be used.
4. Cleaning: Excessive dust on the projector surface shall be cleaned in a timely manner, as it will affect the heat dissipation.
5. Moisture protection: The projector is vulnerable to the damp air. Its operating humidity is about 45%- 60%.
6. Vibration prevention: The projector shall be strictly protected from strong impact, extrusion and vibration. Try not to move and knock the projector during its normal operation, which will cause the internal circuit faults.

# TROUBLESHOOTING GUIDE

## 1. Blurry Image

- \* Adjust focus ring/keystone.
- \* Projector and screen/wall must be in effective distance.

## 2. Remote Unresponsive

- \* Make sure remote points at IR receiver directly.
- \* Do not cover IR receiver.
- \* Try a new pair of AAA batteries.

## 3. Upside Down Images

- \* Go to Menu>PICTURE>Projection mode to flip the projection image.

## 4. Auto On/Off

- \* Go to Menu>TIME>Auto On/Auto Off and set the time to automatically turn on/off the projector.
- \* Go to Menu>TIME>Sleep Timer to adjust the time period before the projector automatically turns off.

## 5. Factory Reset

- \* Go to Menu>OPTION>Factory Reset to restore factory settings as needed.

## 6. Language Settings

- \* Go to Menu>OPTION>OSD Language to select the language.

## 7. Dolby Sound

- \* Turn off the Dolby sound on your device or apps: Settings > Display & Sounds > Audio > Dolby Digital Output > turn Dolby Digital OFF.

## 8. Why Is the Audio of the Projector Available but Without Display?

- \* The video format is not supported by the projector.
- \* Encryption applied to the videos or media player which holds the video.
- \* If the lamp of the projector is off with only audio playing, the lamp is defective.

### **Please Contact Amazon Seller Support for Replacement.**

- \* Try another HDMI cable if you select the HD input source.



# PROJECTOR



Made in China